PURPOSE: The purpose of this procedure is to demonstrate clean and reset the filters for Smartboard projector NEC NP610S.

OPERATING SYSTEM: Windows 7 is demonstrated in this procedure, but similar steps can be taken with Windows XP and Vista.

PROCESS		REFERENCE IMAGE
STEP 1: Locate filter location on the rear of the projector.		
	Remove filter by pressing the tab located on the top of the filter frame.	
STEP 2: Locate filter location on the side of the projector.	Remove filter by pressing the tab located on the top of the filter frame.	



FAQ: Cleaning Smartboard Filters

Step 4: Dry Filters	Pat dry with paper towels Let filters completely dry. Reinstall filters	LET DRY OVERNIGHT!
Step 5: Reset Clean Filter Hours Warning	• Push "MENU"	Image: State of the state

FAQ: Cleaning Smartboard Filters

 Right arrow until reset menu shows 	
 Press the down arrow to Clear Filter Hours Press ENTER to select Left arrow to YES Press ENTER, then EVIT 	CLEARLAND HOUSE
button twice	